

INTEGRA



EVOLVE Manual Pipettes

Operating Instructions

INTEGRA Declaration of Conformity

INTEGRA Biosciences Corp. – Hudson, NH, USA

declares on its own responsibility that the devices

| Description | Models |
|-------------------------------|---|
| EVOLVE Manual Pipettes | 3011, 3012, 3013, 3015, 3016, 3018, 3019, 3022, 3024, 3025, 3026, 3028, 3032, 3034, 3035, 3036, 3038, 3042, 3044, 3045 |

comply with:

EU Regulations

| | |
|--|------------------|
| Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) | 1907/2006 |
|--|------------------|

International Standards

| | |
|--|-------------------|
| Piston-operated volumetric apparatus - Part 2: Piston pipettes | ISO 8655-2 |
|--|-------------------|

Hudson, New Hampshire, USA - August 03, 2020



George Kalmakis
VP Operations

Table of Contents

| | | |
|------------------|---|----|
| Chapter 1 | Introduction | |
| | 1.1 Symbols used | 5 |
| | 1.2 Intended use | 5 |
| | 1.3 Safety notes | 6 |
| Chapter 2 | Description of the device | |
| | 2.1 Scope of delivery | 7 |
| | 2.2 Overview of the EVOLVE Manual Pipettes | 7 |
| Chapter 3 | Installation | |
| | 3.1 Optional black plunger cap | 8 |
| | 3.2 Changing the Plunger Spring | 8 |
| Chapter 4 | Operation | |
| | 4.1 Setting the volume | 10 |
| | 4.2 Attaching and removing GripTip pipette tips | 10 |
| | 4.3 Pipetting | 11 |
| | 4.3.1 Aspirating and Dispensing | 11 |
| | 4.3.2 Reverse mode | 12 |
| | 4.3.3 Proper pipetting techniques | 13 |
| | 4.4 Troubleshooting | 14 |

Chapter 5 Maintenance

| | | |
|-----|--|----|
| 5.1 | Cleaning | 15 |
| 5.2 | Single channel lower end disassembly | 15 |
| | 5.2.1 Disassembly..... | 15 |
| | 5.2.2 Reassembly | 18 |
| 5.3 | Sterilization | 20 |
| | 5.3.1 Autoclaving the disassembled components..... | 20 |
| 5.4 | Servicing..... | 21 |
| | 5.4.1 Shipping to INTEGRA Biosciences..... | 21 |
| | 5.4.2 Changing O-rings of tip fittings..... | 21 |
| | 5.4.3 Lubrication | 22 |
| 5.5 | Calibration | 23 |
| | 5.5.1 Materials | 23 |
| | 5.5.2 Definitions | 23 |
| | 5.5.3 Test conditions and environment..... | 24 |
| | 5.5.4 Pre-wetting of tips | 24 |
| | 5.5.5 Leak test | 25 |
| | 5.5.6 Obtaining the actual volume | 26 |
| | 5.5.7 Calculation of accuracy and precision | 27 |
| | 5.5.8 Adjusting EVOLVE Manual Pipettes..... | 28 |
| 5.6 | Equipment disposal | 29 |

Chapter 6 Technical Data

| | | |
|-----|--------------------------------|----|
| 6.1 | Environmental conditions | 30 |
| 6.2 | Pipette specifications..... | 30 |
| 6.3 | Z Correction Factors..... | 32 |

Chapter 7 Accessories and Consumables

| | | |
|-----|-------------------|----|
| 7.1 | Accessories | 33 |
| 7.2 | Consumables | 34 |

| | |
|----------------------|-----------|
| Imprint | 39 |
|----------------------|-----------|

1 Introduction

These operating instructions contain all the information required for installation, operation and maintenance of the EVOLVE Manual Pipettes. This chapter informs about the symbols used in these operating instructions, the intended use of the EVOLVE Manual Pipettes and the general safety instructions.

1.1 Symbols used

The operating instructions specifically advise of residual risks with the following symbols:

**WARNING**

This safety symbol warns against hazards that could result in injury. It also indicates hazards for machinery, materials and the environment. It is essential that you follow the corresponding precautions.

**CAUTION**

This symbol cautions against potential material damage. Follow the instructions.

**NOTE**

This symbol identifies important notes regarding the correct operation of the device and labor-saving features.

1.2 Intended use

This is a general-purpose laboratory instrument for use in research only. Any use of this instrument in a medical or IVD setting is under the sole responsibility of the user.

EVOLVE Manual Pipettes are intended to be used in a laboratory for aspirating and dispensing liquids in the volume range of 0.2–5000 µl using GripTip pipette tips.

1.3 Safety notes

EVOLVE Manual Pipettes comply to the recognized safety regulations and is safe to operate. EVOLVE Manual Pipettes can only be operated when in perfect condition and while observing these operating instructions.

The device may be associated with residual risks if it is used or operated improperly by untrained personnel. Any person operating the EVOLVE Manual Pipettes must have read and understood these operating instructions, and particularly, the safety notes, or must have been instructed by supervisors so that safe operation of the device is guaranteed.

**WARNING**

When handling dangerous substances, comply with the material safety data sheet (MSDS) and with all safety guidelines such as the use of protective clothing and safety goggles.

**CAUTION**

- *Do not immerse the EVOLVE Manual Pipettes in liquid. The fluid can damage internal parts. Avoid pipetting of liquids whose vapors could attack the materials PA (polyamide), POM (polyoxymethylene), FPM (fluor-rubber), NBR (nitrile-rubber), CR (chloroprene), silicone. Corrosive vapors could also damage metallic parts inside the device.*
- *Repairs may only be performed by INTEGRA Biosciences AG or by an authorized after-sales service member.*
- *Parts may be replaced with original INTEGRA Biosciences parts only.*

**NOTE**

Prolonged exposure of the EVOLVE Manual Pipettes to UV-light can cause discoloration and/or yellowing of the pipette housing. However, this will not affect the performance of the device in any way.

Regardless of the listed safety notes, additional applicable regulations and guidelines of trade associations, health authorities, trade supervisory offices, etc. must be observed.


Please visit our website www.integra-biosciences.com on a regular basis for up to date information regarding REACH classified chemicals contained in our products.

2 Description of the device

2.1 Scope of delivery

- EVOLVE Manual Pipette
- Multipurpose Tool
- Color Coded Plunger Cap
- Quick Start Guide
- Replacement O-rings (for 200 µl, 1000 µl and 5000 µl models)

2.2 Overview of the EVOLVE Manual Pipettes

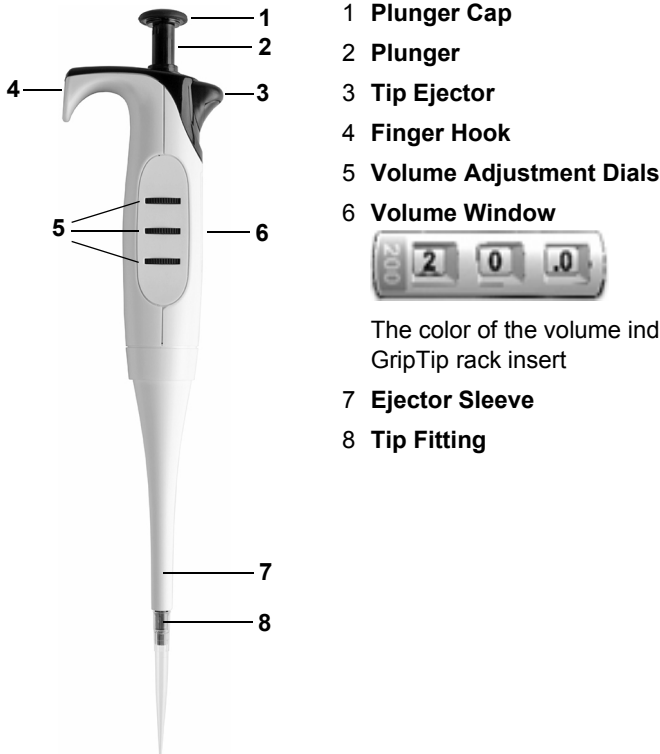

The color of the volume indicator label matches GripTip rack insert


3 Installation

3.1 Optional black plunger cap

If desired, replace color coded plunger cap with black plunger cap.

3.2 Changing the Plunger Spring

The plunger spring installed inside the pipette is the light spring option. You can exchange with a heavier plunger spring to achieve more control of the plunger movement.

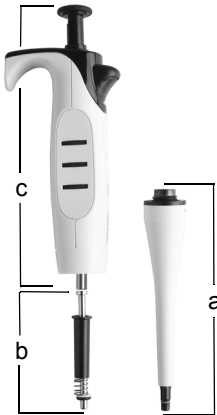


- 1) Unscrew the **Cylinder Assembly** (a) and separate the **Piston Assembly** (b, models 2–100 μl) or **Piston** (model 200–1000 μl) from the upper part of the pipette (c). It is held in place by a small magnet.



NOTE

5000 μl piston and cylinder assembly is removed as one piece.

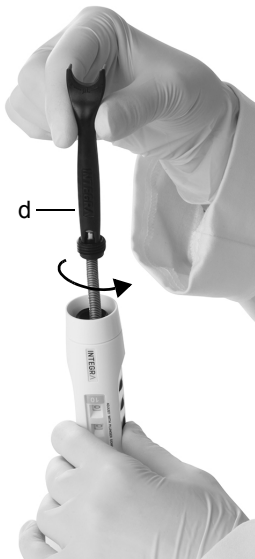

- 2) Set the pipette to the maximum setting. The maximum setting is higher than the maximum volume.
- 3) Put the two teeth of the Multipurpose Tool (d) vertically into the slots of the black opening inside at the bottom of the pipette's body (c). Rotate counterclockwise until the plunger spring assembly (e) is released.



- 4) To install the heavier spring assembly, screw the plunger spring assembly (e) clockwise into the upper part of the pipette using the Multipurpose Tool.
- 5) Re-attach the Piston assembly/Piston. Screw clockwise to attach the Cylinder Assembly (a) to the body of the pipette.




CAUTION

Validate or calibrate your pipette after reassembly.

4 Operation

4.1 Setting the volume

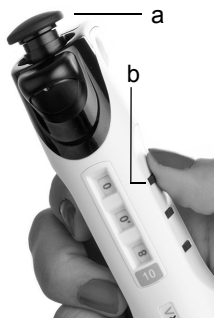

- 1) To set the desired pipetting volume press down the **Plunger** (a) and rotate slightly clockwise to release the volume dials.
- 2) Spin the **Adjustment Dials** (b) until the desired volume is shown in the Volume Window.
- 3) Slightly rotate and slowly release the **Plunger** (a) to set the volume.

4.2 Attaching and removing GripTip pipette tips



CAUTION

To ensure optimal performance of your EVOLVE Manual Pipettes always use GripTips of correct size which have been designated for the use with the EVOLVE Manual Pipettes, see [“7.2 Consumables” on page 34](#).

The unique GripTip system of the EVOLVE Manual Pipettes reduces attachment and ejection forces, ensures a perfect fitting to prevent the tips from falling off and provides a perfect seal. On a multichannel pipette, all tips sit at the same height.



- A rim inside the GripTips snaps over the multi-lobes and ensures firm attachment of the tips.
- A shoulder provides a positive stop to prevent over-tightening of the tips. Without hammering, the tip is either on or off but nothing in between.
- O-ring provides forgiving and robust seal surface for the pipette tip.

Attach the tips:


When loading tip(s), press the pipette into the appropriate GripTip(s) until you hear and feel a click indicating that a seal has been achieved. Once you feel the click, stop applying pressure. When loading GripTip pipette tips using a multichannel pipette, slowly rock the pipette from one side to the other side to ensure the proper seal is achieved.

Discard your used tips:

If liquid is in the tips, empty them by pressing down the **Plunger** (2) to the second stop (see section [4.3](#)). Tips are easily removed by pressing the **Tip Ejector** (3).

4.3 Pipetting

The Plunger can be pushed down to two different stops:

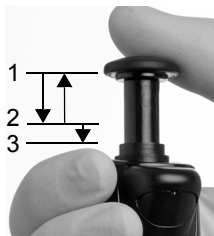


- 1) Top position: Varies depending on volume setting.
- 2) First stop: Fixed calibrated position for aspirating and dispensing.
- 3) Second Stop: To blowout the residual liquid.

For detailed recommendations for pipetting, see also [“4.3.3 Proper pipetting techniques”](#) on page 13.

4.3.1 Aspirating and Dispensing


To aspirate and dispense liquid, perform the following steps:

Aspirate

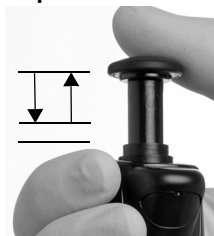

- 1) With GripTips attached, push down the **Plunger** to the first stop.
- 2) Immerse the GripTips in liquid.
- 3) Slowly return **Plunger** to the top position. For higher volumes (>200 µl), follow the liquid level by moving the pipette down.
- 4) Remove the GripTips from liquid.

Dispense

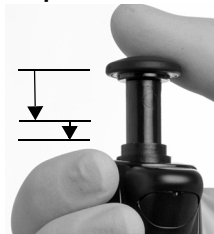


- 5) To dispense the liquid, push the **Plunger** down to the first stop.
- 6) If there is any residual liquid in tip, a blowout should be performed by pressing the **Plunger** to the second stop.
- 7) Remove the GripTips from vessel and release **Plunger**.

4.3.2 Reverse mode


Viscous samples should be aspirated and dispensed at slower speeds and in reverse pipetting mode:

Aspirate

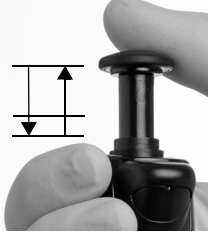

- 1) Fully push down the **Plunger** to the second stop.
- 2) Immerse the GripTips in the liquid, let the **Plunger** slowly release to the upper position and wait shortly until the liquid is fully aspirated.

Dispense

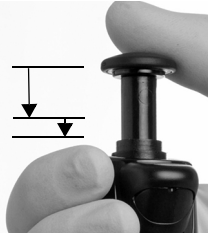

- 3) To dispense, press the **Plunger** slowly down to the first stop and wait a few seconds to dispense the liquid.
- 4) Remove the GripTips from the target vessel.
- 5) To expel the excess liquid, press the **Plunger** to the second stop.

4.3.3 Proper pipetting techniques

INTEGRA Biosciences recommends the following techniques for enhancing pipetting results. These techniques are consistent with ISO standard 8655-2.

- It is best to immerse the GripTips just below the surface of the liquid (2–3 mm) to allow the desired volume to be aspirated. If the tip is immersed too deep, the risk of carry-over is increased due to liquid drops clinging to the outer surface of the tip.
- Press and release the plunger with consistent speed and smoothness.
- Always pre-wet GripTips. After loading tips onto your pipette, aspirate and dispense the full volume 2-3 times to coat the inside of pipet tips. Pre-wetting ensures that the liquid and air inside the tips are at equal temperature and the dead air space is humidified. Neglecting to perform a pre-wet can result in a smaller delivery volume in the first few dispenses.
- EVOLVE Manual Pipettes are air displacement pipettes. To properly dispense liquids, ensure that the pipette tip is at a 0–20° angle. After each dispense, you must touch GripTips against the vessel wall or liquid. This process is referred to as “touching off” or “tip touch” and prevents liquid from clinging to the pipette tips.
- Air displacement pipettes show the best performance between 35% and 100% of the nominal volume.
- Viscous samples should be aspirated and dispensed at slow speeds to ensure accurate pipetting. In addition, pipetting should be performed in a reverse mode.
- For pipetting liquids with high vapor pressures (such as methanol or ethanol), use relatively fast pipetting speeds and avoid prolonged pauses after aspiration.
- Calibrate based on fluid type. EVOLVE Manual Pipettes are tested and calibrated at the factory for use with distilled water at room temperature. It may be necessary to re-calibrate your EVOLVE Manual Pipettes if the liquid to be used has different physical properties (specific gravity and vapor pressure) than water.



WARNING

Avoid pipetting for extended periods. To minimize the risk of repetitive strain injury, include pauses of several minutes.

Use filtered GripTips to pipette corrosive or biohazardous liquids. The filter prevents vapors and aerosols from corroding or contaminating the cylinder assembly.

4.4 Troubleshooting

| Problem | Probable cause | Remedy |
|----------------------------------|---|---|
| Leaking. | <ul style="list-style-type: none"> • Tip incorrectly attached. • Foreign particles between tip and tip fitting. • Damaged red O-ring. | <ul style="list-style-type: none"> • Attach a new tip. • Clean tip fitting. Attach new tips. • Change the O-ring, see 5.4.2. • If leak persists, contact service. |
| Dispense results are inaccurate. | <ul style="list-style-type: none"> • Unsuitable calibration for liquid class. • Improper pipetting techniques. | <ul style="list-style-type: none"> • Recalibrate with the liquids in question. • Adjust aspiration and dispense speed depending on liquid: <ul style="list-style-type: none"> - High viscosity liquids may require calibration. - High vapor pressure liquids may require pre-wetting. - Refer to proper pipetting techniques section 4.3.3 |
| Not dispensing/ aspirating. | <ul style="list-style-type: none"> • Piston stuck or not connected. • Internal seal is damaged. | <ul style="list-style-type: none"> • Contact service. |
| Droplets on the tips. | <ul style="list-style-type: none"> • Temperature of liquid differs from that of air inside the tips. • Liquid of low viscosity and high vapor pressure. • Touch off was not performed. | <ul style="list-style-type: none"> • Pre-wet tips up to 3 times. • Increase dispensing speed. • Perform a touch-off. |

5 Maintenance

5.1 Cleaning

The materials used on the exterior of the EVOLVE Manual Pipettes support regular cleaning intervals. Clean the external components with a lint-free cloth lightly soaked with mild soap solution in distilled water or with a 70 % dilution of Isopropyl or Ethanol. Never use acetone or other solvents.




WARNING

- *DO NOT immerse the entire pipette into the cleaning solution.*
- *DO NOT spray cleaning solution directly onto the exterior body of the pipette.*

If the pipette is exposed to corrosive vapors, e.g. from concentrated acids, or if liquid enters the lower pipetting end, disassemble the lower part of the pipette and clean the internal parts with distilled water or with a 70 % dilution of Isopropyl or Ethanol. Follow the instructions below for disassembly.


5.2 Single channel lower end disassembly

5.2.1 Disassembly

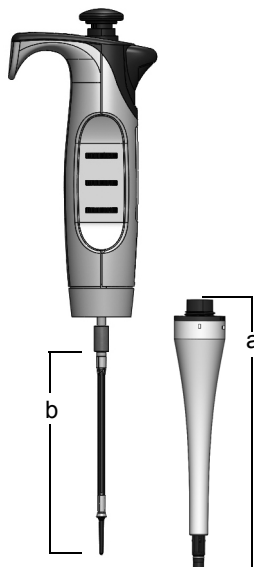

Models of all sizes:

- 1) Before you separate the lower part from a single channel pipette, press down the plunger and rotate it clockwise into lock position, see 4.1.
- 2) Unscrew the **Cylinder Assembly** (a) clockwise and gently slide it down from the pipette body. This exposes the **Piston Assembly** (b, models 2–100 µl) or **Piston** with mounted **Cup Seal** (models 200–1000 µl).

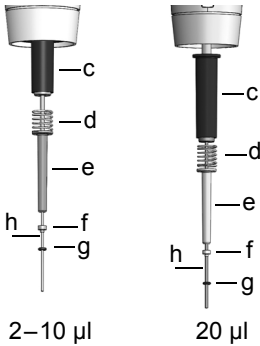

Models 2–10 µl, 20 µl:


3) Slide the following components from the Piston (h):

- **O-Ring (black, g) and Seal/Backer (f) Assembly**
- **Pressure Sleeve (e)**
- **Retainer Spring (d)**
- **Retainer Sleeve (c)**

Separate the **Piston (h)** from the upper part of the pipette. It is held in place by a small magnet.

If the **O-Ring and Seal/Backer Assembly (f)** are still stuck in the Cylinder after the piston is removed, tap the top face of the Cylinder on the table.

Set these components aside or place them in an autoclave pouch.

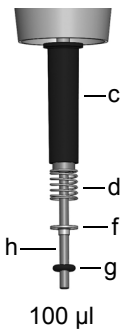


Model 100 µl:

3) Slide the following components from the Piston (h):

- **O-Ring (black, g) and Seal (white, f) Assembly**
- **Retainer Spring (d)**
- **Retainer Sleeve (c)**

Separate the **Piston (h)** from the upper part of the pipette. It is held in place by a small magnet.


Set these components aside or place them in an autoclave pouch.

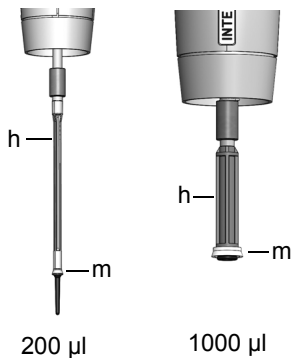


Models 200 µl and 1000 µl:

3) Separate the **Piston assembly** from the upper part of the pipette. It is held in place by a magnet.

Slide finger nail under the smaller diameter of the **Cup Seal (m)** and push it off the Piston.

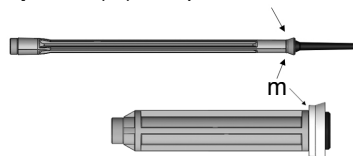


Set these components aside or place them in an autoclave pouch.

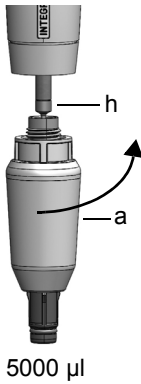

Model 5000 µl:


- 3) Separate the **Piston (h)** from the upper part of the pipette. Release the magnetic holder by bending the **Cylinder Assembly (a)** 90 degrees to the side.

Cylinder Assemblies (a):



Models 2–1000 µl:

- 4) With the **Cylinder Assembly (a)** in hand, turn counterclockwise to remove the black **Snap Ring (i)**. Pull out the black **Cylinder (k)** from the white **Sleeve (l)**. Remove the **Ejector Spring (j)**.

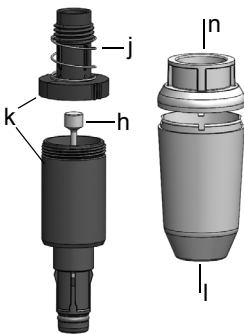

Model 5000 µl:

- 4) Put your fingernails into the gap of the white **Sleeve (l)** and pull off the **Sleeve Cap (n)**. With the black **Cylinder (k)** in hand unscrew the upper part. Remove the **Piston (h)** with mounted **Cup Seal**. Remove the **Ejector Spring (j)**.


Models of all sizes:

- 5) Set all components of the lower part aside or place them in an autoclave pouch.

5.2.2 Reassembly

Before reassembling the pipette, check each component for lint or dust particles. It is recommended to replace the **O-Ring** and **Seal** or **Cup Seal**. Lightly lubricate the Piston, O-Rings and Seals (see “5.4.3 Lubrication” on page 22).


Models 2 µl– 1000 µl:

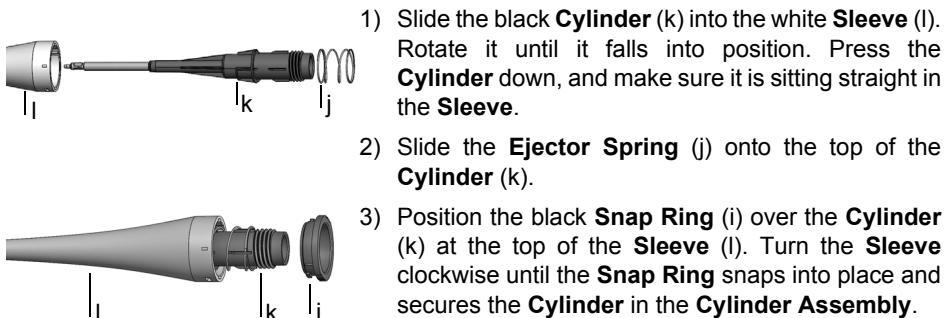

- 1) Slide the black **Cylinder** (k) into the white **Sleeve** (l). Rotate it until it falls into position. Press the **Cylinder** down, and make sure it is sitting straight in the **Sleeve**.
- 2) Slide the **Ejector Spring** (j) onto the top of the **Cylinder** (k).
- 3) Position the black **Snap Ring** (i) over the **Cylinder** (k) at the top of the **Sleeve** (l). Turn the **Sleeve** clockwise until the **Snap Ring** snaps into place and secures the **Cylinder** in the **Cylinder Assembly**.


Models 2 µl– 100 µl:

See “5.2.1 Disassembly” on page 15 for visual representations of all sized lower ends.

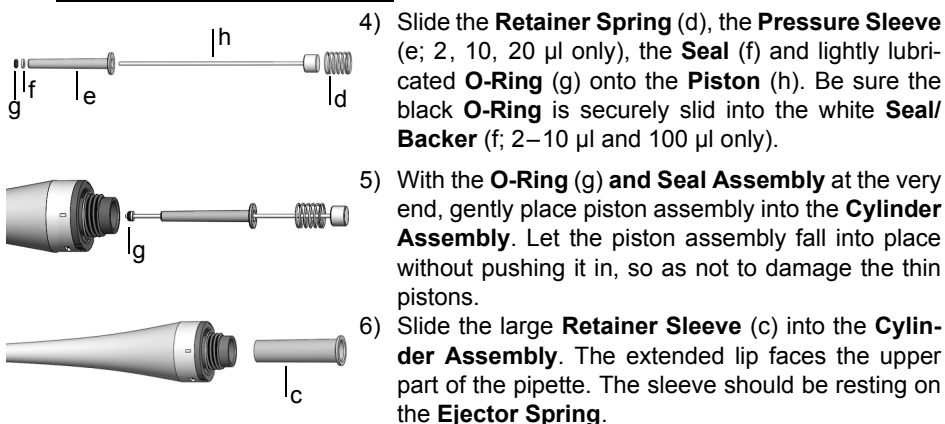


- 4) Slide the **Retainer Spring** (d), the **Pressure Sleeve** (e; 2, 10, 20 µl only), the **Seal** (f) and lightly lubricated **O-Ring** (g) onto the **Piston** (h). Be sure the black **O-Ring** is securely slid into the white **Seal/Backer** (f; 2–10 µl and 100 µl only).
- 5) With the **O-Ring** (g) and **Seal Assembly** at the very end, gently place piston assembly into the **Cylinder Assembly**. Let the piston assembly fall into place without pushing it in, so as not to damage the thin pistons.
- 6) Slide the large **Retainer Sleeve** (c) into the **Cylinder Assembly**. The extended lip faces the upper part of the pipette. The sleeve should be resting on the **Ejector Spring**.


Models 200 µl, 1000 µl:




- 4) Attach **Cup Seal** (m) to the **Piston** (h). Insert the **Piston** into the greased **Cylinder Assembly**.

Model 5000 µl:

- 1) Insert the **Cup Seal** of the **Piston** (h) into the top of greased **Cylinder's** lower part (k). Work back and forth to spread the lube around the cylinder walls. Screw on the upper part of **Cylinder** (k).

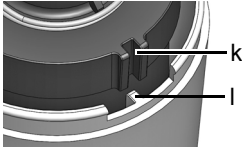

- 2) Align the slots on the **Cylinder** (k) with the bosses inside the **Sleeve** (l) and slide the Cylinder Assembly into place.

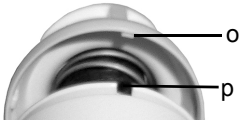

- 3) Ensure that the four noses (o) of the **Sleeve Cap** point to the openings (p) of the **Sleeve**.



Re-attach the **Sleeve Cap** (n).

Models of all sizes:

- 7) Position the **Piston** at the small magnet to connect the Piston to the upper part of the pipette.
- 8) Screw the **Cylinder Assembly** (a) counterclockwise to attach it to the body of the pipette.

Perform a leak test (see [“5.5.5 Leak test”](#) on page 25) and validate pipetting volumes after reassembly.

5.3 Sterilization

If the surface of the EVOLVE Manual Pipettes have been in contact with biohazardous material, they must be decontaminated in accordance to good laboratory practice. Wipe the clean surface with a lint-free cloth, lightly soaked e. g. with the following disinfectants:

- Ethanol 70 %
- Microcide SQ 1:64
- Glutaraldehyde solution 4%
- Virkon solution 1-3%

Follow the instructions provided with the disinfectants.

It is not recommended to autoclave the EVOLVE Manual Pipettes. If autoclaving is required, only the lower assembly of the EVOLVE single channel pipettes can be autoclaved.



WARNING

Service is required after autoclaving the EVOLVE Manual Pipettes!

Do not autoclave the entire unit. Multichannel pipettes CANNOT be autoclaved, they might be damaged!

As-found calibration (measurement report, indicating “before” data) is not possible after autoclaving!

5.3.1 Autoclaving the disassembled components

Place the disassembled components (see [5.2.1](#)) into steam autoclave in an autoclave pouch.

You may autoclave the components at 121°C, 1 bar overpressure for 20 minutes.



CAUTION

Service is required after autoclaving the EVOLVE Manual Pipettes!

5.4 Servicing

5.4.1 Shipping to INTEGRA Biosciences

For any service or repairs, please contact your local service technician.

**WARNING**

If working with infectious materials, e. g. human pathogens, the EVOLVE Manual Pipettes need to be decontaminated before sending to service and the declaration on the absence of health hazards must be signed. This is necessary to protect service personnel.


5.4.2 Changing O-rings of tip fittings

200 μ l, 1000 μ l and 5000 μ l EVOLVE Manual Pipettes feature tip fittings with red O-rings. This O-ring is used to seal against the inside wall of GripTips and provides a robust seal.

O-rings are made of durable silicone. If necessary, e.g. in case of a leakage due to damaged O-ring, you can replace these O-rings. A set of spare O-rings can be ordered separately, see [“7.2 Consumables”](#) on page 34.


**WARNING**

Avoid mechanical damage of the tip fittings.

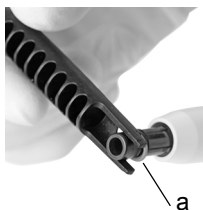

For 200 μ l or 1000 μ l pipettes, slide the Multipurpose Tool sideways onto the tip fitting until the O-ring (a) builds a loop. Remove the O-ring with plastic tweezers.


For 5000 μ l pipettes, simply use plastic tweezers to remove the O-ring.



Slide a new O-ring over the tip fitting (b).


5.4.3 Lubrication

The internal seals and O-rings are subject to wear. An undamaged thin lubricant film is important to keep the seals tight. The lubricant recommended depends on the EVOLVE pipette size, see “7.2 Consumables” on page 34:




Single channel 2 µl – 10 µl models:

Use Fluorocarbon Gel (#100-00136-50) to lightly lubricate the piston (h) without components (f, g) slid onto. Put a drop of grease onto your fingers, lubricate the black O-ring (g) and slide it over the white seal (f).




Single channel 20 µl and 100 µl model:

Use the Klüberalfa Lube (#162-00001-00) to lightly lubricate the piston (h) without components (f, g) slid onto. Lightly lubricate outer ring of the O-ring seal (g).

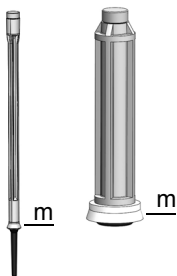

Single channel 200 µl and 1000 µl models:

Use the Klüberalfa Lube (#162-00001-00) to lightly lubricate the outer ring of the Cup Seal (m). Do not lubricate the bottom of Cup Seals.

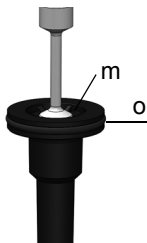

Single channel 5000 µl model:

Use the Klüberalfa Lube (#162-00001-00) to lightly lubricate the outer ring of the Cup Seal (m) and O-Ring (o). Do not lubricate the bottom of Cup Seals.

5.5 Calibration

The EVOLVE Manual Pipettes are factory tested and calibrated under environmentally controlled conditions using a gravimetric procedure in accordance with ISO 8655 standards. For the accuracy and precision specifications, see “6.2 Pipette specifications” on page 30.

For information regarding calibration service, please contact your local dealer.

5.5.1 Materials

- Precision balance with 0.01 mg readability
- ASTM Class 2 or OIML E2 test weights
- Evaporation trap for balance
- Weighing vessel (optimally the height-to-diameter ratio is at least 3:1)
- Measurement equipment for temperature, humidity and atmospheric pressure
- Distilled water (Grade 3 according to ISO 3696)
- New non-filtered GripTips matching the pipette volume (see section 7.2)
- 1 beaker with distilled water

5.5.2 Definitions

Blow-out: Discharges any residual liquid from the pipette tip.

Blow-in: After the blow-out, the piston moves back into home position. This causes a slight intake of air (or liquid if tips remain in the liquid).

Two step blow-out: To avoid an early blow-in, keep the plunger pressed after dispensing, remove the tips from liquid and then release the plunger.

Pre-wet: The action of pre-coating the inside of the liquid contacting parts with a thin film of the same liquid. Additionally, it equilibrates humidity of the air space inside tip and the pipette.

Touch off: Touching the pipette tip against the surface liquid or side of well-plate to release any sample liquids that might be on the end of the pipette tip.

5.5.3 Test conditions and environment

Tests and calibrations should be performed in conditions and environment according to ISO 8655-6 standard.

- Temperature needs to be between 18–25 °C and remain constant (± 0.5 °C) throughout the calibration.
- Optimal relative humidity of the environment is >50% and around the dispensing position 80%.
- GripTips, pipettes and distilled water need to be in the calibration laboratory for at least 2 hours prior to calibration to reach temperature equilibrium with the environment.
- The balance must be validated using reference weights before and after a measuring series. A low and high volume weight should be used. E.g.:
 - 100 g (Mettler Toledo, #11119250)
 - 10 g (Mettler Toledo, #11119220)
 - 1 g (Mettler Toledo, #11119190)
 - 10 mg (Mettler Toledo, #11119130)



CAUTION

Always use new, pre-wetted GripTips for leak test and calibration.

5.5.4 Pre-wetting of tips

Pre-wet new GripTips three times prior to starting tests and calibrations. This is required every time a tip is changed.

- 1) Set the pipette to aspirate full volume.
- 2) Attach a new unused GripTip which correspond to the volume range of the pipette directly from the rack without touching the tip by hand.
- 3) Use a separate waste container for pre-wet dispenses.
- 4) Push down the Plunger to the first stop. Aspirate by releasing with medium speed.
- 5) Dispense: Keep the Plunger pressed to the first stop until all liquid is expelled.

At the end of the third cycle push the Plunger to the second stop, remove the tip from the liquid and then release the Plunger to perform a two-step blowout.

5.5.5 Leak test

It is recommended to perform a leak test every 3 months or when errors occur.

- 1) Prewet tips as described above.
- 2) Set the EVOLVE Manual Pipettes to aspirate full volume.
- 3) Push down the Plunger to the first stop. Aspirate full volume by releasing with medium speed and verify liquid level is not decreasing during 10 seconds while GripTips are still in distilled water.
- 4) Remove the GripTips from the liquid and hold the pipette at a 20° angle. Wait for 20 seconds.
 - a) Observe whether liquid droplets are forming at the end of the GripTips.
 - b) On a multichannel pipette, verify liquid level is even across all channels.
- 5) Immerse GripTips approximately 2 mm into distilled water and push and release the Plunger to mix six times.
 - a) Observe whether air bubbles are forming when dispensing.
 - b) On a multichannel pipette, check whether the levels stay approximately on the same level across all channels.
- 6) At the end push the Plunger to the second stop and remove the tip from the liquid before releasing.

Signs indicating a leak

- 1) During the mix cycle in the leak test, the liquid level of 1 channel is decreasing.



NOTE

A decreasing liquid level at aspiration could be an indication of a slow leak. Performing a retest at 10 mixes may help identify a slow leak.

- 2) Liquid is left in a tip after the last dispense during the leak test.
- 3) One or more channels show air bubbles during the mix cycle in the leak test.
- 4) Droplets are forming when holding the pipette in the air for 20 seconds, even if a pre-wet was performed.
- 5) The liquid levels are not equal on all channels after aspiration.

If the pipette is leaking, change O-rings (see [5.4.2](#)) and lubricate pistons (see [5.4.3](#)) or contact your service technician.

5.5.6 Obtaining the actual volume

INTEGRA certifies the pipettes at 10%, 50% and 100% of the nominal value. For each volume 5 measurements are taken from all channels.

General

- 1) Always use new, unused GripTips, also when changing the test volume (e.g. from 200 µl to 20 µl).
- 2) Always pre-wet (section [5.5.4](#)) when using a new GripTip. For a low volume measurement, first set the maximum volume for the pre-wet and then change to the volume to be measured.
- 3) After dispensing, perform a touch off to make sure no liquid remains on the tip.

Gravimetric testing

- 1) Write down the ambient temperature and air pressure.
- 2) Set the pipette to the high test volume.
- 3) Perform a pre-wet, see [5.5.4](#).
- 4) The first and second dispense to the balance should not be recorded. After each dispense re-tare the balance.
- 5) Aspirate the Target volume of water keeping the pipette in a vertical to 20-degree position while immersing the pipet tip 2–3 mm below the surface of the water. When withdrawing the tip from the liquid, gently wipe the tip against the side wall of the vessel to remove any liquid from the outside of the pipet tip.
- 6) Start the first measurement. Always pipet directly into the liquid of the weigh container on the balance. At the end push the Plunger to the second stop and hold the plunger pressed until the pipette is removed from the weigh vessel to perform a 2-step blowout. Record the weight from the balance.
- 7) After completing the 5 high volume measurements, continue with the mid and low test measurements by repeating steps 3–6.


5.5.7 Calculation of accuracy and precision

Accuracy

The ability of a pipette to aspirate or dispense the exact volume desired. It indicates the proximity of measurement results to the true value. Accuracy is also known as systematic error and as the name indicates, can be corrected/calibrated.

Precision, coefficient of variation (CV)

Precision indicates the repeatability or reproducibility of the measurement. It is also called random error and is therefore an unpredictable error, which cannot be corrected/calibrated.

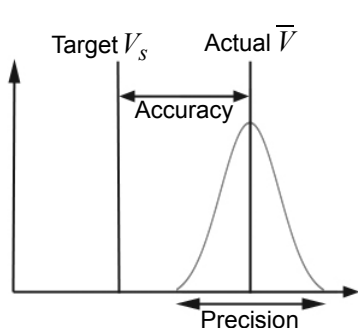

The following symbols are used throughout this text:

V_s = Selected test or target Volume

m_i = Measured Liquid Weight (g)

Z = Z factor, see [6.36.3](#)

V_i = Converted Volume (ml or μ l)

\bar{V} = Actual mean Volume (ml or μ l)

n = Number of measurements

Conversion of the mass to volume

The values obtained by balance readings are in grams. These values need to be converted to micro liters using the Z correction factor. It takes into account the water density and air buoyancy during weighing at the corresponding test temperature. To determine the correct Z factor, find the intersection between temperature and air pressure in [Table 6.36.3](#). Round up temperature and air pressure values.

Multiply each weight m_i obtained in [5.5.6](#) with the corresponding Z factor:

$$V_i = m_i \times Z$$

Add together the volumes V_i delivered, divide the sum by n (e.g. $n = 5$) to calculate the mean volume \bar{V} (in milliliters or micro liters) delivered at the test temperature, which is the Actual Volume:

$$\bar{V} = \frac{1}{n} \times \sum_{i=1}^n V_i$$

Calculation of systematic error (accuracy)

The systematic error e_s can be calculated using the following equation with V_s being the selected test volume:

$$e_s = \bar{V} - V_s$$

or in percent:

$$e_s = \frac{100 \times (\bar{V} - V_s)}{V_s}$$

Calculation of random error (precision %)

To calculate the random error as the repeatability standard deviation s_r , use the following equation:

$$s_r = \sqrt{\frac{\sum_{i=1}^n (V_i - \bar{V})^2}{n - 1}}$$

The random error can also be expressed as a percentage, by the coefficient of variation CV , using equation:

$$CV = 100 \times \frac{s_r}{\bar{V}}$$

If the pipette is properly calibrated, the Target volume V_s should equal the Actual volume \bar{V} within the accuracy specifications of the pipette.


5.5.8 Adjusting EVOLVE Manual Pipettes

Compare the calculated accuracy and precision values with the corresponding pipette specifications given in section [6.2](#).

The industry standard is to test and present specifications using neat transfers. This is aspirating and dispensing the same volume.

In case an EVOLVE Manual Pipette has not met the calibration specifications it needs to be adjusted. This can be corrected with the Multipurpose Tool.

Put the two teeth of the Multipurpose Tool into the slots on the top of the pipette.

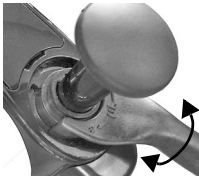

Rotate clockwise to increase the volume (slight turn up to a full turn).

Rotate counterclockwise to decrease the volume (slight turn up to a full turn).



NOTE

Validate the new volume set by repeating the gravimetric testing.

5.6 Equipment disposal



The EVOLVE Manual Pipettes must not be disposed of with unsorted municipal waste.

Dispose of the EVOLVE Manual Pipettes in accordance with the laws and regulations in your area.

6 Technical Data

6.1 Environmental conditions

Operation

| | |
|-------------------|---|
| Temperature range | 5–40°C |
| Humidity range | Max. rel. humidity 80% for temperatures up to 31°C, decreasing linearly to 50% rel. humidity at 40°C. |
| Altitude range | <2000 m |

6.2 Pipette specifications

| EVOLVE Manual Pipettes | | | | | Manufacturer | |
|------------------------|----------|-------------------|------------------------|------------------|---------------|----------------|
| Channel | Part No. | Volume Range (µl) | Volume Increments (µl) | Test Volume (µl) | Accuracy (±%) | Precision (≤%) |
| 1 | 3011 | 0.2–2 | 0.001 | 0.2 | 12.0 | 6.0 |
| | | | | 1 | 3.0 | 1.6 |
| | | | | 2 | 1.5 | 0.7 |
| 1 | 3012 | 1–10 | 0.01 | 1 | 5.0 | 1.5 |
| | | | | 5 | 1.5 | 0.8 |
| | | | | 10 | 1.2 | 0.5 |
| 1 | 3013 | 2–20 | 0.01 | 2 | 7.0 | 2.0 |
| | | | | 10 | 1.6 | 0.5 |
| | | | | 20 | 1.2 | 0.35 |
| 1 | 3015 | 10–100 | 0.1 | 10 | 3.5 | 1.0 |
| | | | | 50 | 1.0 | 0.35 |
| | | | | 100 | 0.8 | 0.2 |
| 1 | 3016 | 20–200 | 0.1 | 20 | 2.5 | 1.0 |
| | | | | 100 | 1.0 | 0.3 |
| | | | | 200 | 0.7 | 0.18 |
| 1 | 3018 | 100–1000 | 1 | 100 | 3.0 | 0.6 |
| | | | | 500 | 1.0 | 0.3 |
| | | | | 1000 | 0.8 | 0.2 |
| 1 | 3019 | 500–5000 | 5 | 500 | 3.0 | 0.6 |
| | | | | 2500 | 1.2 | 0.3 |
| | | | | 5000 | 0.6 | 0.18 |

| EVOLVE Manual Pipettes | | | | | Manufacturer | |
|------------------------|----------|-------------------|------------------------|------------------|---------------|----------------|
| Channel | Part No. | Volume Range (µl) | Volume Increments (µl) | Test Volume (µl) | Accuracy (±%) | Precision (≤%) |
| 8 | 3022 | 1–10 | 0.01 | 1 | 12.0 | 7.0 |
| | | | | 5 | 4.0 | 3.0 |
| | | | | 10 | 2.0 | 1.2 |
| 8 | 3024 | 5–50 | 0.05 | 5 | 5.0 | 2.0 |
| | | | | 25 | 2.0 | 1.0 |
| | | | | 50 | 1.2 | 0.5 |
| 8 | 3025 | 10–100 | 0.1 | 10 | 5.0 | 1.5 |
| | | | | 50 | 2.0 | 0.8 |
| | | | | 100 | 1.2 | 0.3 |
| 8 | 3026 | 20–200 | 0.1 | 20 | 5.0 | 1.2 |
| | | | | 100 | 2.0 | 0.5 |
| | | | | 200 | 1.2 | 0.3 |
| 8 | 3028 | 100–1250 | 1.0 | 125 | 5.0 | 1.1 |
| | | | | 625 | 1.8 | 0.7 |
| | | | | 1250 | 1.0 | 0.3 |
| 12 | 3032 | 1–10 | 0.01 | 1 | 12.0 | 7.0 |
| | | | | 5 | 4.0 | 3.0 |
| | | | | 10 | 2.0 | 1.2 |
| 12 | 3034 | 5–50 | 0.05 | 5 | 5.0 | 2.0 |
| | | | | 25 | 2.0 | 1.0 |
| | | | | 50 | 1.2 | 0.5 |
| 12 | 3035 | 10–100 | 0.1 | 10 | 5.0 | 1.5 |
| | | | | 50 | 2.0 | 0.8 |
| | | | | 100 | 1.2 | 0.3 |
| 12 | 3036 | 20–200 | 0.1 | 20 | 5.0 | 1.2 |
| | | | | 100 | 2.0 | 0.5 |
| | | | | 200 | 1.2 | 0.3 |
| 12 | 3038 | 100–1250 | 1.0 | 125 | 5.0 | 1.1 |
| | | | | 625 | 1.8 | 0.7 |
| | | | | 1250 | 1.0 | 0.3 |

| EVOLVE Manual Pipettes | | | | | Manufacturer | |
|------------------------|----------|-------------------|------------------------|------------------|---------------|----------------|
| Channel | Part No. | Volume Range (µl) | Volume Increments (µl) | Test Volume (µl) | Accuracy (±%) | Precision (≤%) |
| 16 | 3042 | 1–10 | 0.01 | 1 | 12.0 | 7.0 |
| | | | | 5 | 4.0 | 3.0 |
| | | | | 10 | 2.0 | 1.2 |
| 16 | 3044 | 5–50 | 0.05 | 5 | 5.0 | 2.0 |
| | | | | 25 | 2.0 | 1.0 |
| | | | | 50 | 1.2 | 0.5 |
| 16 | 3045 | 10–100 | 0.1 | 10 | 5.0 | 1.5 |
| | | | | 50 | 2.0 | 0.8 |
| | | | | 100 | 1.2 | 0.3 |

The multichannel pipettes' specifications represent the performance of all channels of the pipettes. Precision = Coefficient of Variation.

6.3 Z Correction Factors

| Temp. (°C) | Air Pressure (kPa) | | | | | | |
|------------|--------------------|--------|--------|--------|--------|--------|--------|
| | 80 | 85 | 90 | 95 | 100 | 101.3 | 105 |
| 18.0 | 1.0022 | 1.0023 | 1.0023 | 1.0024 | 1.0025 | 1.0025 | 1.0025 |
| 18.5 | 1.0023 | 1.0024 | 1.0024 | 1.0025 | 1.0025 | 1.0026 | 1.0026 |
| 19.0 | 1.0024 | 1.0025 | 1.0025 | 1.0026 | 1.0026 | 1.0027 | 1.0027 |
| 19.5 | 1.0025 | 1.0026 | 1.0026 | 1.0027 | 1.0027 | 1.0028 | 1.0028 |
| 20.0 | 1.0026 | 1.0027 | 1.0027 | 1.0028 | 1.0028 | 1.0029 | 1.0029 |
| 20.5 | 1.0027 | 1.0028 | 1.0028 | 1.0029 | 1.0029 | 1.0030 | 1.0030 |
| 21.0 | 1.0028 | 1.0029 | 1.0029 | 1.0030 | 1.0031 | 1.0031 | 1.0031 |
| 21.5 | 1.0030 | 1.0030 | 1.0031 | 1.0031 | 1.0032 | 1.0032 | 1.0032 |
| 22.0 | 1.0031 | 1.0031 | 1.0032 | 1.0032 | 1.0033 | 1.0033 | 1.0033 |
| 22.5 | 1.0032 | 1.0032 | 1.0033 | 1.0033 | 1.0034 | 1.0034 | 1.0034 |
| 23.0 | 1.0033 | 1.0033 | 1.0034 | 1.0034 | 1.0035 | 1.0035 | 1.0036 |
| 23.5 | 1.0034 | 1.0035 | 1.0035 | 1.0036 | 1.0036 | 1.0036 | 1.0037 |
| 24.0 | 1.0035 | 1.0036 | 1.0036 | 1.0037 | 1.0037 | 1.0038 | 1.0038 |
| 24.5 | 1.0037 | 1.0037 | 1.0038 | 1.0038 | 1.0039 | 1.0039 | 1.0039 |

Z values in microliters per milligram

7 Accessories and Consumables

7.1 Accessories

| General | Part No. |
|---|-----------------|
| EVOLVE Pipette Multipurpose Tool (for calibration, O-ring removal and plunger spring exchange) | 3200 |
| EVOLVE Pipette Shelf Hook, 1/pack | 3210 |
| EVOLVE Pipette Shelf Hook, 5/pack | 3211 |
| Linear Stand for manual/electronic pipettes | 3215 |

| PopTop Base, compatible with ECO Racks and GREEN CHOICE refill inserts | Part No. |
|---|-----------------|
| Small PopTop Base for use with 12.5 µl, 125 µl and 300 µl GripTips | 3250 |
| Large PopTop Base for use with 1250 µl GripTips | 3255 |

| Color Coded Plunger Caps (5/pack) | Part No. |
|--|-----------------|
| Black for use with any pipette | 3220 |
| Purple for use with 2 µl, 10 µl, 20 µl manual pipettes | 3221 |
| Yellow for use with 50 µl, 100 µl manual pipettes | 3222 |
| Green for use with 200 µl manual pipettes | 3223 |
| Blue for use with 1000 µl manual pipettes | 3224 |
| Orange for use with 5000 µl manual pipettes | 3225 |

| EVOLVE Control Spring Assembly | Part No. |
|--|-----------------|
| for single channel pipettes 2, 10, 20, 100, 200 and 1000 µl only | 3230 |

7.2 Consumables

| O-rings for tip fittings | | Part No. |
|---------------------------------|-------------------------|-----------------|
| 200 µl, (300 µl) | Replacement kit 24/pack | 100-00027-50 |
| 1000 µl, (1250 µl) | Replacement kit 24/pack | 100-00028-50 |
| 5000 µl | Replacement kit 10/pack | 100-00029-00 |

| Lubricant for pipettes and O-rings | | Part No. |
|---|---|-----------------|
| Lube | Kluberalfa Lube, for single channel 20 µl – 5000 µl pipettes | 162-00001-00 |
| Grease | Grease Nye Fluorocarbon Gel 807, 5 g / 0.2 oz, for single channel 2 µl – 10 µl pipettes | 100-00136-50 |

| GripTips for all INTEGRA Pipettes | | Part No. |
|--|---|-----------------|
| Purple: | 10 ECO racks of 96 tips, non-sterile, LONG | 3406 |
| 12.5 µl | 10 ECO racks of 96 tips, pre-sterilized, LONG | 3407 |
| ECO | 10 ECO racks of 96 tips, pre-sterilized, filter, LONG | 3408 |
| racks | 10 ECO racks of 384 tips, non-sterile, LONG | 3403 |
| | 10 ECO racks of 384 tips, pre-sterilized, LONG | 3404 |
| | 10 ECO racks of 384 tips, pre-sterilized, filter, LONG | 3405 |
| | 10 ECO racks of 96 tips, non-sterile | 3416 |
| | 10 ECO racks of 96 tips, pre-sterilized | 3417 |
| | 10 ECO racks of 96 tips, pre-sterilized, filter | 3418 |
| | 10 ECO racks of 384 tips, non-sterile | 3413 |
| | 10 ECO racks of 384 tips, pre-sterilized | 3414 |
| | 10 ECO racks of 384 tips, pre-sterilized, filter | 3415 |
| Purple: | Bulk pack, 1 bag of 1000 tips, non-sterile | 4411 |
| 12.5 µl | 5 inserts of 384 tips, non-sterile, GREEN CHOICE | 4412 |
| | 5 racks of 384 tips, non-sterile | 4413 |
| | 5 racks of 384 tips, sterile | 4414 |
| | 5 racks of 384 tips, sterile, filter | 4415 |
| | 5 inserts of 384 tips, pre-sterilized, GREEN CHOICE | 4416 |
| | Bulk pack, 1 bag of 1000 tips, non-sterile, LONG | 4401 |
| | 5 inserts of 384 tips, non-sterile, LONG, GREEN CHOICE | 4402 |
| | 5 racks of 384 tips, non-sterile, LONG | 4403 |
| | 5 racks of 384 tips, sterile, LONG | 4404 |
| | 5 racks of 384 tips, sterile, filter, LONG | 4405 |
| | 5 inserts of 384 tips, pre-sterilized, LONG, GREEN CHOICE | 4406 |
| | 5 XYZ racks of 384 tips, sterile, filter, SHORT | 6475 |
| Purple: | 5 XYZ racks of 384 tips, non-sterile | 6553 |
| 12.5 µl | 5 XYZ racks of 384 tips, sterile | 6554 |
| low | 5 XYZ racks of 384 tips, sterile, filter | 6555 |
| retention | 5 XYZ racks of 384 tips, non-sterile, LONG | 6503 |
| | 5 XYZ racks of 384 tips, sterile, LONG | 6504 |
| | 5 XYZ racks of 384 tips, sterile, filter, LONG | 6505 |
| | 5 XYZ racks of 384 tips, sterile, filter, SHORT | 6575 |

| GripTips for all INTEGRA Pipettes | | Part No. |
|--|---|-----------------|
| Yellow: | 10 ECO racks of 96 tips, non-sterile | 3426 |
| 50 µl, | 10 ECO racks of 96 tips, pre-sterilized | 3427 |
| 125 µl | 10 ECO racks of 96 tips, pre-sterilized, filter | 3428 |
| ECO | 10 ECO racks of 384 tips, non-sterile | 3423 |
| racks | 10 ECO racks of 384 tips, pre-sterilized | 3424 |
| | 10 ECO racks of 384 tips, pre-sterilized, filter | 3425 |
| Yellow: | Bulk pack, 1 bag of 1000 tips, non-sterile | 4421 |
| 50 µl, | 5 inserts of 384 tips, non-sterile, GREEN CHOICE | 4422 |
| 125 µl | 5 racks of 384 tips, non-sterile | 4423 |
| | 5 racks of 384 tips, sterile | 4424 |
| | 5 racks of 384 tips, sterile, filter | 4425 |
| | 5 inserts of 384 tips, pre-sterilized, GREEN CHOICE | 4426 |
| Yellow: | 5 XYZ-racks of 384 tips, non-sterile | 6563 |
| 50 µl, | 5 XYZ-racks of 384 tips, sterile | 6564 |
| 125 µl | 5 XYZ-racks of 384 tips, sterile, filter | 6565 |
| low | | |
| retention | | |

| GripTips for all INTEGRA Pipettes | | Part No. |
|--|--|-----------------|
| Green: | 10 ECO racks of 96 tips, non-sterile | 3433 |
| 300 µl | 10 ECO racks of 96 tips, pre-sterilized | 3434 |
| ECO racks | 10 ECO racks of 96 tips, pre-sterilized, filter | 3435 |
| Green: | Bulk pack, 1 bag of 1000 tips, non-sterile | 4431 |
| 300 µl | 5 inserts of 96 tips, non-sterile, GREEN CHOICE | 4432 |
| | 5 racks of 96 tips, non-sterile | 4433 |
| | 5 racks of 96 tips, sterile | 4434 |
| | 5 racks of 96 tips, sterile, filter | 4435 |
| | 5 inserts of 96 tips, pre-sterilized, GREEN CHOICE | 4436 |
| | Bulk pack, 1 bag of 1000 tips, non-sterile, LONG | 4481 |
| | 5 inserts of 96 tips, non-sterile, LONG, GREEN CHOICE | 4482 |
| | 5 racks of 96 tips, non-sterile, LONG | 4483 |
| | 5 racks of 96 tips, sterile, LONG | 4484 |
| | 5 racks of 96 tips, sterile, filter, LONG | 4485 |
| | 5 inserts of 96 tips, pre-sterilized, LONG, GREEN CHOICE | 4486 |
| | 5 racks of 96 tips, non-sterile, WIDE BORE | 6633 |
| | 5 racks of 96 tips, sterile, WIDE BORE | 6634 |
| | 5 racks of 96 tips, sterile, filter, WIDE BORE | 6635 |
| Green: | 5 racks of 96 tips, non-sterile | 6533 |
| 300 µl | 5 racks of 96 tips, sterile | 6534 |
| low retention | 5 racks of 96 tips, sterile, filter | 6535 |

| GripTips for all INTEGRA Pipettes | | Part No. |
|--|---|-----------------|
| Blue: | 10 ECO racks of 96 tips, non-sterile | 3443 |
| 1250 µl | 10 ECO racks of 96 tips, pre-sterilized | 3444 |
| ECO racks | 10 ECO racks of 96 tips, pre-sterilized, filter | 3445 |
| Blue: | Bulk pack, 1 bag of 500 tips, non-sterile | 4441 |
| 1250 µl | 5 inserts of 96 tips, non-sterile, GREEN CHOICE | 4442 |
| | 5 racks of 96 Tips, non-sterile | 4443 |
| | 5 racks of 96 Tips, sterile | 4444 |
| | 5 racks of 96 Tips, sterile, filter | 4445 |
| | 5 inserts of 96 tips, pre-sterilized, GREEN CHOICE | 4446 |
| | Bulk pack, 1 bag of 500 tips, non-sterile, SHORT | 4491 |
| | 5 inserts of 96 tips, non-sterile, SHORT, GREEN CHOICE | 4492 |
| | 5 racks of 96 Tips, non-sterile, SHORT | 4493 |
| | 5 racks of 96 Tips, sterile, SHORT | 4494 |
| | 5 racks of 96 Tips, sterile, filter, SHORT | 4495 |
| | 5 inserts of 96 tips, pre-sterilized, SHORT, GREEN CHOICE | 4496 |
| | 5 racks of 96 tips, non-sterile, WIDE BORE | 6643 |
| | 5 racks of 96 tips, sterile, WIDE BORE | 6644 |
| | 5 racks of 96 tips, sterile, filter, WIDE BORE | 6645 |
| Blue: | 5 racks of 96 tips, non-sterile | 6543 |
| 1250 µl | 5 racks of 96 tips, sterile | 6544 |
| low retention | 5 racks of 96 tips, sterile, filter | 6545 |
| | 5 racks of 96 Tips, non-sterile, SHORT | 6593 |
| | 5 racks of 96 Tips, sterile, SHORT | 6594 |
| | 5 racks of 96 Tips, sterile, filter, SHORT | 6595 |
| Orange: | Bulk pack, 1 bag of 250 tips, non-sterile | 4451 |
| 5 ml | 5 racks of 48 Tips, non-sterile | 4453 |
| | 5 racks of 48 Tips, sterile | 4454 |
| | 5 racks of 48 Tips, sterile, filter | 4455 |
| | Individually wrapped, 100 tips per case, sterile | 4456 |

Imprint

© 2020 INTEGRA Biosciences AG

All rights to this documentation are reserved. In particular the rights of reproduction, processing, translation and the form of presentation lie with INTEGRA Biosciences AG. Neither the complete documentation nor parts thereof may be reproduced in any way, or stored and processed using electronic media or distributed in any other way without the written consent of INTEGRA Biosciences AG.

This operating instruction manual has part number 900-00010-00, the version is V04. EVOLVE and GripTip are trademarks of INTEGRA Holding, Switzerland.

Manufacturer

INTEGRA Biosciences AG

CH-7205 Zizers, Switzerland

T +41 81 286 95 30

F +41 81 286 95 33

INTEGRA Biosciences Corp.

Hudson, NH 03051, USA

T +1 603 578 5800

F +1 603 577 5529

info@integra-biosciences.com

www.integra-biosciences.com

Customer service

Please contact your local INTEGRA Biosciences representative.

To find out name and address, go to www.integra-biosciences.com.

Further information and operating instructions in other languages are available on www.integra-biosciences.com or on request info@integra-biosciences.com.